

SCORPION

Z4120 Alarm Controller

As installed by Eagle Alarms

09 5357117

www.eaglealarms.co.nz

User Instructions

Using the Scorpion Z4120C alarm controllers

The Keypad

The Scorpion Z4120C and Z8020C communicate system status through the keypad beeper. During an arming cycle the beeper will sound for the entire exit time. This is a 'leave now' warning. Scorpion will arm at the expiry of this period. On entry, the beeper sounds for the programmed entry period. If a valid user code is entered to disarm the system, the beeper emits two short tones. An incorrect entry is signalled by one long tone.

The 'Status' Lamp

The yellow status lamp is used to indicate several conditions.

Yellow lamp on:	the system is armed or arming
Yellow lamp off:	the system is disarmed
Yellow lamp flashing:	an alarm has occurred, a system fault exists or the panic function has been activated

The 'Mains' Lamp

The 'Mains' lamp is on when mains power is applied. In the event of a mains failure the 'Mains' light flashes until mains power is restored, and an arm/disarm cycle is completed. The 'Mains' lamp also flashes to indicate a low battery condition. When the battery is restored to full charge and an arm/disarm cycle is completed, the 'Mains' lamp stops flashing.

The 'Armed' Lamp

The 'Armed' lamp illuminates when the system is armed. The 'Armed' lamp also flashes to indicate when an alarm condition has occurred.

User Codes

Scorpion Z4120C and Scorpion Z8020C are each capable of storing up to twenty-four user codes. Each user code may be two to four digits in length and each may be programmed with one or all of six different functions. Each user code may be programmed:

- As a user code that can arm and/or disarm the system from a touch tone phone
- As a user code that can select a partitioned area to arm (Z8020C only)
- As a master user code that can program other user codes
- As an arming code only (can not disarm the system)
- As a user code that does not report to a central station
- As a user code that can exclude zones at arming.

If no option is selected for a user code, that code will perform a basic arm and disarm function only.

User code 1 is factory set as a **master** user code **1234** and should be changed to your own selection. This user code can also be used to program the remaining user codes. Your installer will need to assign the functions of each additional user code when your system is installed. For example you may require user code 18 to be used by a domestic helper to

arm but not disarm the system. This restriction on code 18 will need to be pre-set by the installer. The code may be entered at a later time using the master code. Use the user code attributes table in the rear of this user manual to record the functions for each code.

Adding, Changing or Deleting a user Code

Enter a valid **master user code**, press keys **1+3** together then enter a **new user code** then enter **#** then the **user identifier** (1 to 15). Repeat the procedure for adding other new user codes. To delete user codes, follow the same procedure, but omit the 'new user code' step. Finish by entering a **#**.

Example. To change the master user code from 1234 to 1912 press the following sequence:

①②③④ then ① + ③ then ①⑨①② # then ①
(Your current code) (Together) (New code)

Arming the System

Using Quickarm

If your installer has programmed the **quickarm** option you can arm the system by entering **1** then **#**. For partitioned systems (Z8020C only) entering **1 #** will arm **Area A** and entering **2 #** will arm **Area B**.

Quick arming Scorpion ① #

Using a User Code

Enter a valid **two, three** or **four** digit user code then **#**.

①②③④ then #

If all zones are clear, the keypad sounds a repeating sequence of three short beeps for the duration of the exit delay and the yellow status lamp turns on. The zone lamps for all zones that are arming are also turned on. At the end of the exit delay the zone lamps extinguish and the system is now armed.

If a zone fault or potential alarm condition exists and the user attempts to arm the system, the lamp(s) for those zone(s) flash and are accompanied by a repeating sequence of two long beeps. This indicates that one or more of the zones are faulty or not secured. The panel should be disarmed, the problem located (possible open door or window) and the system re-armed.

To Arm the System and Exclude a Zone(s)

Enter a valid **user code** then ***** (all zone LED's light) followed by the **zone number(s)** to be excluded (those zone LED's turn off), then press **#**.

Example: to arm the system with zones 4 and 5 excluded press:

①②③④ then * then ④⑤ then #

Disarming the System

Follow the same sequence as for arming, enter a valid **two, three** or **four** digit user code then **#**.

①②③④ then #

The keypad will beep twice and the yellow status light will turn off. A flashing yellow status lamp indicates that one or more zones have been alarmed. The zone lamps for any zones which have alarmed will flash until the next arming cycle. Note the zone number(s) and notify your installer, or security monitoring company.

If the yellow status lamp is flashing and no zone lamps are flashing the alarm condition may have been caused by a system fault, press **8 9** then **#** on your keypad. The following table indicates the type of alarm condition that has occurred:

Zone 1 lamp flashes	Alarm caused by a nitewatch, two key, medical or fire panic
Zone 2 lamp flashes	The battery has discharged or is faulty
Zone 3 lamp flashes	Mains power to the alarm has failed
Zone 4 lamp flashes	A dialler communications error has occurred
Zone 5 lamp flashes	Phone line is faulty or is disconnected

Zone 6 lamp flashes Siren output or auxiliary power supply overloaded or open circuit

Hold Down Commands

To use a 'hold down' command the function key (keypad digit) must be pressed and held down until a **2nd key-beep** is heard. Note that hold down commands will **ONLY** function when the alarm control is fully disarmed. The following hold down commands are available:

Setting the Real Time Clock Time

It is advisable but not mandatory to set the system Real Time Clock. Check with your installer if the clock has been set. The clock **MUST** be set if the Auto Arming feature is used. Clock time is in 24 hour format. To set the clock proceed as follows: Press and hold down **key 6** until a **2nd key-beep** is heard then enter a **master user code** then # then the **time in 24 hour format** then #.

Example: Setting the alarm system clock to 2:45 pm.

BEEP BEEP
HOLD DOWN (6) → then (1) (2) (3) (4) (#) then (1) (4) (4) (5) (#)

Setting the Auto Arming Time

Scorpion may be programmed to 'Auto Arm' at a pre-set time each day. To access this feature an Auto Arming time must be programmed using the [**Hold Down**] 7 command. Press and hold down **key 7** until a **2nd key-beep** is heard then enter a **master user code** then # then the '**time to arm**' in 24 hour format then #.

Example: Setting the auto arming time to 5:30 pm

BEEP BEEP
HOLD DOWN (7) → then (1) (2) (3) (4) (#) then (1) (7) (3) (0) (#)

If a valid auto arming time has been entered, the keypad will sound three beeps every six seconds for the installer programmed pre-alert time before auto arming. At the end of the pre-alert time the panel starts counting down the exit delay and sounds the 'leave now' warning beeper, then arms all zones. During the pre-alert, entering any key at the keypad will abort the auto arming cycle. Once the alarm has started the exit timer and warning beeper, a valid user code is required to abort the arming cycle.

Entering an invalid auto arm time (eg. 2500) disables this function. This is the factory default setting.

Note: To enable Auto Arming it is also necessary to program the correct time into Scorpion's real time clock.

User Number	User Initials	Master Code	Arm Only	Phone Arm	Arm area A or B	Report to Station	Can Exclude Zones
1		Y					
2							
3							
4							
5							
6							
7							
8							
9							
10							
11							
12							
13							
14							