# TM50 Touch User Guide - Magellan and Spectra SP Systems






Supplied and installed by



Specialists in residential + commercial burglar alarms

09 535 7117 eaglealarms.co.nz

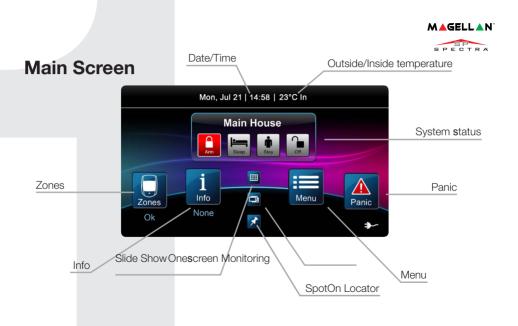





### Arming/Disarming your System

#### Arming/Disarming your system:

- 1. Select arming method (Arm/Off) by pressing corresponding button from main screen.
- 2. Enter code (4 to 6 digits).







#### Menu

For menu options press the Menu button and follow the on-screen prompts. Menu options include:

- Bypass Zones
- PGMs
- Alarm Clock
- Zone Chiming
- Clean Screen
- Add-on
- Settings
- System Setup







### **Entering User Programming**

#### Enter user programming:

- 1. Press Menu.
- 2. Press System Setup.
- 3. Enter Master Code.
- 4. From the Master Programming menu press **Users.**







### **Programming a New User**

#### Programming a new user:

- 1. Press Add button to add a user.
- 2. Enter the new User Code and press **Save** button.
- 3. Confirm User Code by entering a 2<sup>nd</sup> time then press **Save.**
- 4. Option to learn remote in, press button on remote or press **Skip**.
- 5. User is now valid.

Back	Users		
User 1		1	~
User 2			
User 3			
User 4			ĺ
User 5		<b>~</b>	6





### **Settings Screen**

Setting screen accessed through Menu then Settings. Settings include:

- Display Settings
- Sound
- Slide show
- Home Page
- Language
- Update Firmware
- Calibrate Sensor
- Product Info







### **OneScreen Monitoring™**

#### To Access OneScreen Monitoring\*:

- 1. Press the 📺 button.
- 2. View open/closed zones (an open door means a zone is open).
- 3. Press on the **Test** button to test all your zones (SoloTest Mode).
- 4. Press on the **Settings** button (top right corner) to access more options.

\*OneScreen Monitoring is an optional feature. Please contact your installer for more information.

S 2 LEST	<mark>Zone L</mark> Open	abel.					i	$\odot$
Zone 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1
Zone 2	1	1	1	1	1	1	1	1
	1	1	1	1	1	1	1	1





### SpotOn Locator™

#### To Access SpotOn Locator\*:

- 1. Press the 🛃 button.
- 2. Follow the onscreen instructions on how to upload photos, images, or schematics for your personalized floor plans.
- 3. Follow the onscreen instructions on how to add/move/delete zones from vour floor plan.

\*SpotOn Locator is an optional feature. Please contact your installer for more information.







### SlideShow

#### To Access SlideShow:

- 1. Press the 😐 button to view the default slideshow.
- 2. Press on the **Settings** button (bottom right corner) to access more options.







### microSD Card

## The TM50's integrated SD card slot has a cover clip for its protection.

If it is foreseen that the microSD card will be used frequently, it is best that the microSD card cover clip be removed before installation. This is because once the keypad is installed, removal of the microSD card requires you to unclip the entire front plate of the TM50.

#### To remove/replace the microSD (without cover clip):

- 1. Push down on the microSD card to unlock.
- 2. Gently pull out the microSD card to remove. If desired, replace card.




#### M AGELL A N°



### microSD Card

# To remove/replace the microSD card with cover clip:

- Using a screwdriver, pry the front housing assembly from the backplate. Once removed, you will notice that the microSD cover clip protection is part of the backplate.
- 2. Remove the microSD card from the front housing assembly. If desired, replace card.

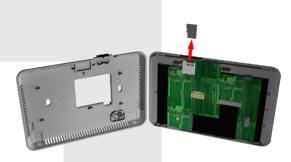



Warranty: For complete warranty information on this product, please refer to the Limited Warranty Statement found on the Web site www.paradox.com/ terms. Your use of the Paradox product signifies your acceptance of all warranty terms and conditions. One or more of the following US patents may apply: 7046142, 6215399, 6111256, 6104319, 5920259, 5886632, 5721542, 5287111, and RE39406 and other pending patents may apply. Canadian and international patents may also apply. @ 2013 Paradox Ltd. All rights reserved. Specifications may change without prior notice. www.paradox.com